
APPLICATION DETAIL

POCKET DOOR SYSTEM

Groove Manufacturing Group Inc. | Split Jamb, Head & Strike U-Jamb - 2x4 / 2x6 / Custom Walls

1 OPENING ELEVATION


GREEN = GMG FINISHED FACE | NOT TO SCALE

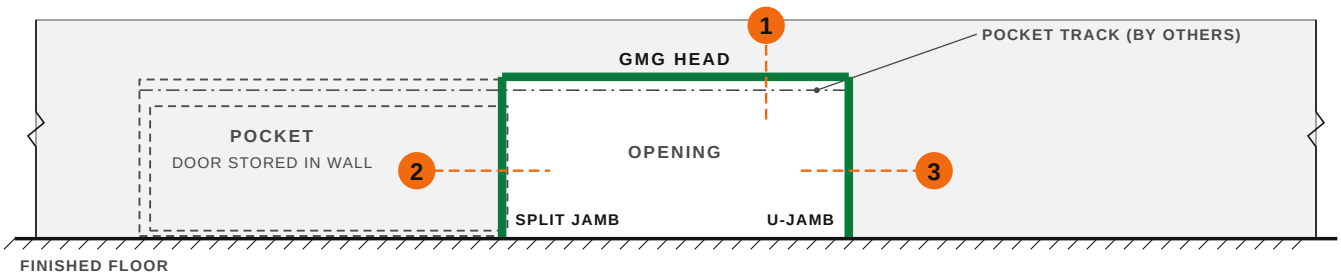

2 DETAILS


1 HEAD SECTION

Split head - same profile as the pocket jamb

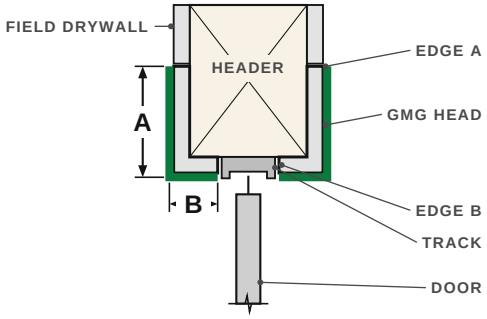


2 POCKET JAMB (PLAN)

Standard split jamb - Edge B at the pocket opening

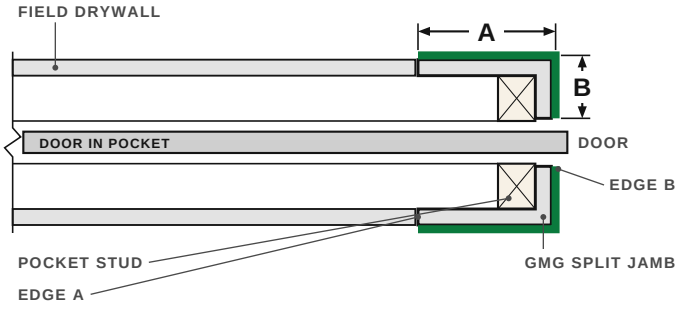


2A POCKET JAMB - WRAP (PLAN)

Profile returns into the door pocket (C)

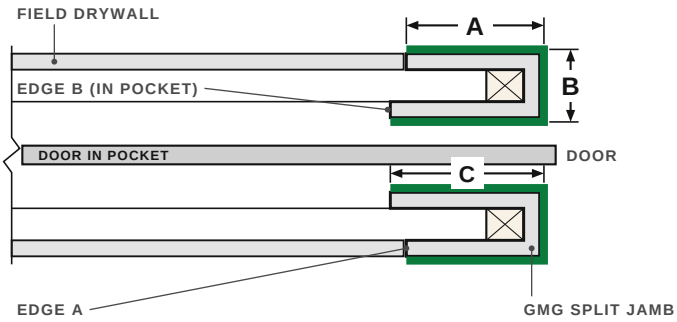

3 STRIKE U-JAMB (PLAN)

Wraps the wall end - single door

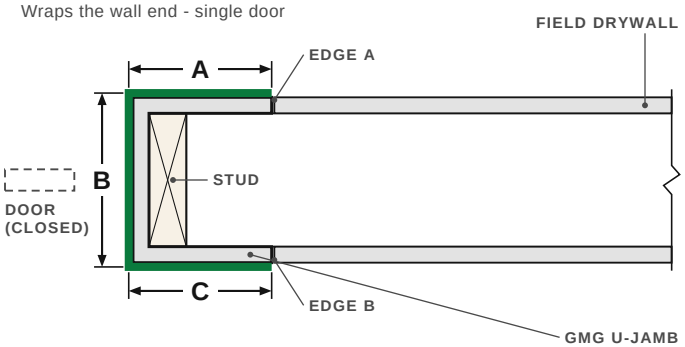

3 GENERAL NOTES

1. Install the pocket frame, track and split studs per the manufacturer before drywall. Double door: Detail 2 or 2A both sides.
2. Install the GMG head first, then the jambs. Keep the door path clear: leave the gap shown under the head and between split jambs.
3. Into split / pocket studs use short drywall screws only, so no fastener reaches into the pocket and scratches the door.
4. Field drywall butts to the GMG profile at Edge A. Edge B finishes at the pocket opening, or inside the pocket on the wrap option (Detail 2A).
5. Tape and finish joints at Edge A / Edge B to the specified level of finish.
6. A, B and C are measured on the finished face. B on the U-jamb equals the finished wall width (2x4, 2x6 or custom).
7. Confirm the door is plumb and slides freely before final finishing. Verify all dimensions on site. Order on the GMG Pocket Door Opening form.